




EK-C352/C352B/C352C High Voltage Insulation Resistance Tester

- ◆ Output Voltage 50V~15kV
- ◆ Test Resistance 0.005MΩ~30TΩ
- ◆ Max Short Circuit Current 7mA
- ◆ Polarization Index Test (PI)
- ◆ Dielectric Absorption Ratio Test (DAR)
- ◆ Step Test Mode(STEP)
- ◆ Ramp Test Mode (RAMP)
- ◆ Dielectric discharge index(DD)
- ◆ Capacitance Test (CAP)
- ◆ Custom Setting Output Voltage
- ◆ Custom Setting Test Time 10s~60min
- ◆ Large Capacity Rechargeable Lithium Battery
- ◆ USB Communication

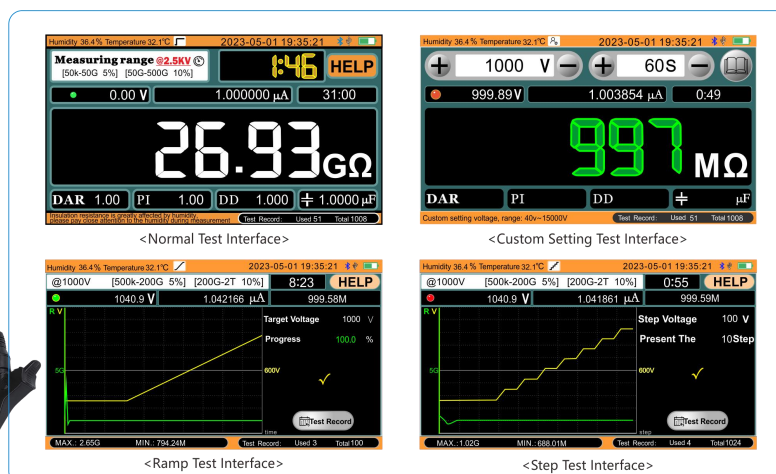

Product Function

Suitable for insulation resistance testing of the large-scale electrical equipment and transmission network cable which in large-capacity, high-voltage, and strong-inductive electrical site.

Insulation resistance test (IR); polarization index test (PI); Dielectric absorption ratio test (DAR); Step test(STEP); Ramp test (RAMP); Dielectric discharge index test(DD). AC/DC Voltage test(V); Distributed capacitance test(CAP).

Product features

1. Touch colorful screen, can display the test data on the same screen. It is very convenient to test operation and view history record.
2. With the unique strong anti-interference technology and stable testing capabilities in large distributed capacitance site (such as long cables) and strong electromagnetic interference environments (such as substations).
3. Perfect measurement index: insulation resistance (IR), polarization index (PI), dielectric absorption ratio (DAR), step (STEP), ramp (RAMP), dielectric discharge index (DD), distributed capacitance (CAP), AC/DC voltage (V).
4. Custom setting measurement mode, optional PI and DAR calculation formulas, custom setting test voltage and custom setting test duration, which can provide variety of options to user and convenient the special site request.
5. Voltage monitor: Automatically monitoring the live voltage of the measured object. when the voltage exceed 36V and will automatically prohibit to test to effectively protect the instrument and the operator.
6. Current monitor: Automatic display the current of test circuit
7. Temperature monitor: Automatic display the temperature and humidity of tester inside.
8. Automatic discharge function, automatically and quickly release the electric charge of the measured object after the test, no need the external discharge circuit.
9. Large-capacity test record memory, test records can be directly browsed and analyzed in the tester. the tester can automatically store 1000 sets of real-time test data with test date and test time.
10. USB communication and upload function, the recorded data can be uploaded to the computer for stored statistical analysis.
11. Bluetooth communication function, can upload the test results to the mobile phone.

Insulation Resistance Test Accuracy

Rate Voltage		50V	250V	500V	1000V	2500V	5000V	10kV	15kV
Range & Accuracy	±5%	10.0GΩ	50.0GΩ	100GΩ	200GΩ	1.00TΩ	2.00TΩ	4.00TΩ	6.00TΩ
	±10%	100GΩ	500GΩ	1.00TΩ	2.00TΩ	5.00TΩ	10.0TΩ	20.0TΩ	30.0TΩ





Technical Specification

Model	EK-C352	EK-C352B	EK-C352C
Rated Voltage	50V, 250V, 500V, 1000V, 2500V, 5000V	50V, 250V, 500V, 1000V, 2500V, 5000V, 10kV	50V, 250V, 500V, 1000V, 2500V, 5000V, 10kV, 15kV
Output Voltage Accuracy	+4%±10V (when 50V: +4%±2V)	+4%±10V (when 50V: +4%±2V)	+4%±10V (when 50V: +4%±2V)
Insulation Resistance Range	0.005MΩ~10.0TΩ	0.005MΩ~20.0TΩ	0.005MΩ~30.0TΩ
Short Circuit Current	7mA MAX	7mA MAX	7mA MAX
Power Supply	Rechargeable lithium battery pack 6400mAh 14.8V		
Capacitance Measurement	Range: 10nF~200uF; Accuracy: ±10%rdg ± 10nF		
Voltage Measurement	Range: DC 0V~1000V / AC: 0V~750V; Accuracy: ± 5%rdg ±3V		
Customs Setting Output Voltage	EK-C352: 40V~5kV EK-C352B: 40V~10kV EK-C352C: 40V~15kV		
Customs Setting Test Time	10s~3600s		
Polarization Index (PI)	Yes		
Dielectric Absorption Ratio (DAR)	Yes		
Step Voltage(STEP)	Yes		
Ramp(RAMP)	Yes		
Dielectric discharge index (DD)	Yes		
Real Time Current Value	Display test current value, current display range: 0.001nA~7.5mA		
Real Time Voltage Value	Automatically monitoring the voltage of the measured object. In not-testing state,the voltage over 36V will automatically prohibit to test to protect the instrument and the operator		
Test Timer	Automatically record test duration, timing range: 0s~9999s		
Store Function	Automatically store the test date, time , total of 1000 groups, which can view and replay the stored test record		
Maximum immunity to noise/interference	8mA		
Withstand Voltage	AC 3Kv 50Hz 1min(between the test circuit and shell)		
Battery Power Indication	With the battery power indication, when battery voltage low will remind to charge in time		
Automatic Shutdown	15 minutes without any operation after starting up will automatic shutdown		
USB Communication	USB interface; with PC software, stored data can be uploaded to computer for storage, analysis and printing.		
Bluetooth Communication	Bluetooth interface; with mobile APP, stored data can be uploaded for storage, analysis.		
Meter Dimensions	280mmX260mmX160mm		
Meter Weight	Total weight: 5.72kg (include accessories)		
Operating Temperature & Humidity	-20℃~50℃; 80%RH		
Protection Level	Close the case IP65; Open the case IP40		
Suitable Safety Standard	IEC61010-1, IEC61326-1		
Accessories	Host tester: 1PCS; High voltage test line(red): 1PCS; Test line (green): 1PCS; Test line (black): 1PCS; Alligator clip: 1PCS; Hook: 1PCS; Power adaptor: 1PCS; USB communication cable 1PCS; Tool bag: 1PCS		

